


## LCD Display Details

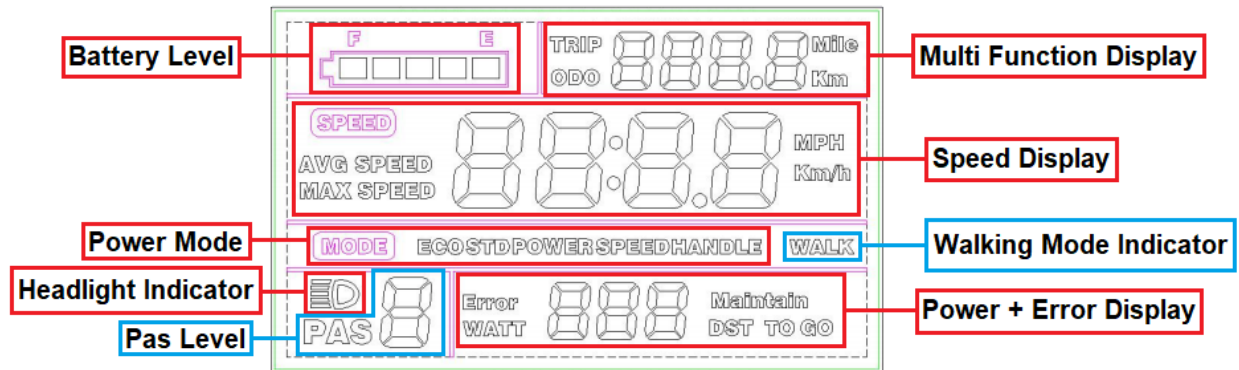

## Control Pad Description



## Display Operations

### Powering On/Off the Display

Press and hold the **MENU** button to power on the display. When the display is turned on press and hold the **MENU** button to turn the display off.

### Changing Assist Levels

Press the **UP** button to increase the PAS level. Press the **DOWN** button to decrease the PAS level.

### Operating the Headlight

Press the red HEADLIGHT button located on the right handlebar to turn on and off the headlight.

### Entering Walking Mode

When the bike is stationary press and hold the **DOWN** button. This will enter it into walking mode where the motor will propel the bike at a speed of 6 km/h for you to walk alongside it. To exit this mode, release the **DOWN** button.

### Switching Readings on the Multifunction Display

Press the **MENU** button to change information shown on the Multi Function display. These will change in the order of: Total Distance (ODO) → Single Trip Distance (TRIP) → Error Code (Error) → Power Output (WATT).

### Switching readings on the Speed Display

Hold the **MENU** and **UP** buttons to switch displayed readings on the Speed display area. This will switch between Current Speed, Average Speed and Max Speed in that order.

### Entering the Display Settings Interface

To enter the settings interface press and hold the **UP** and **DOWN** buttons simultaneously. With a parameter selected use the **UP** and **DOWN** buttons to add or subtract from that value; this is how you change it. Short press the **MENU** button to save your changes and advance to the next parameter. Exit the Settings Interface and save all changed parameters at any time by holding the **UP** and **DOWN** buttons simultaneously.

### Display Setting Interface Options

- P01: Backlight Brightness
  - 1 is the darkest, 3 is the brightest.
- P02: Mileage Unit
  - 0 for KM/metric, 1 for Miles/Imperial.
- P03: Voltage Class **DO NOT CHANGE**
- P04: Display Auto-off Time in minutes
  - Set to 0 to have display only turn off manually.
- P05: PAS Grades
  - 0 for 3 PAS Levels (0-3)
  - 1 for 5 PAS Levels (0-5)
  - 2 for 9 PAS Levels (0-9)
- P06: Wheel diameter
  - This only needs to be changed if you put different sized wheels on the bike. Unit is inches.
- P07: Speed Sensor Signal **DO NOT CHANGE**
- P08: Speed Limit
  - Sets the max speed limit for the bike. Value can be set between 0-50 km/h with 50 being the max value and there will be no speed limit.
- P16: Odometer Reset
  - Press and hold the **UP** button for 5 seconds to reset TRIP odometer.
- P18: Unused - **DO NOT CHANGE**